


## PARTS LIST OIL RESERVOIR KIT

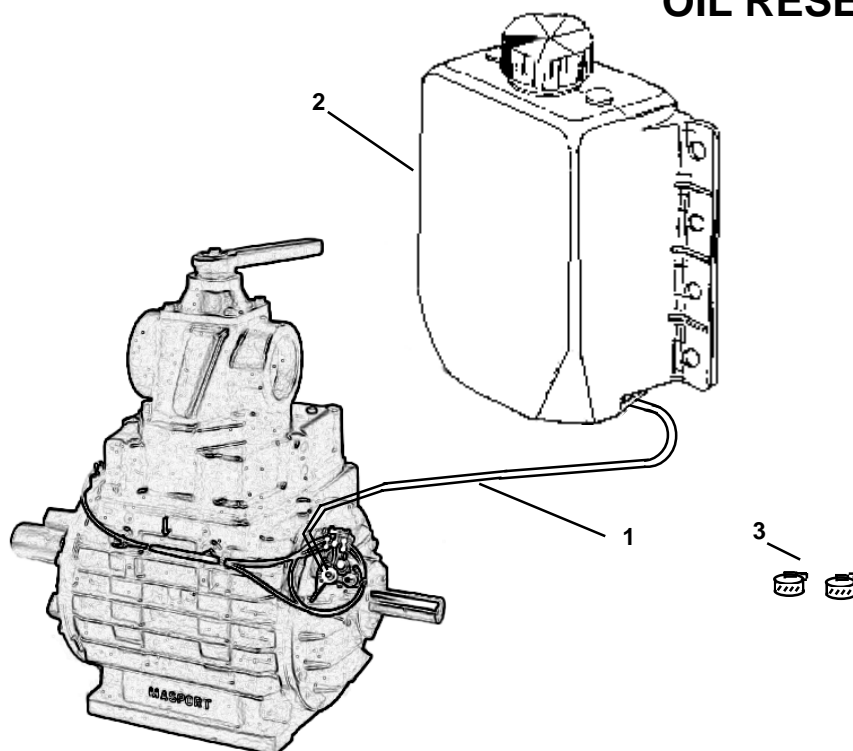

### OIL RESERVOIR KIT PARTS LIST (13023)

FOR USE WITH HXL75F II, HXL75V II, HXL 75WF II,  
HXL75WV II, HXL15F II, HXL15V II HXL15WF II, HXL15WV II

Ref.	Description	Part No.	Qty.
1.	8ft Hose 1/4"	24299	1
2.	Lubricator Tank 4 QT	36001	1
3.	Clamps MXL #4	24310	2

**IMPORTANT:** The oil reservoir must be mounted higher than the oil feed connection on the oil pump. The oil pump must be primed before initial start-up. The oil pump must be bled prior to initial operation and any time afterwards when the oil pump is operated without oil for any period of time. Bleed oil pump of air to prime oil feed line **BEFORE** operating vacuum pump.